

## Pilot uczący ALIEN Green (armepol)

kategoria: Kategorie > Piloty HOTELOWE



Kod QR:



HR-6d EASY to Control

1 remote control - 6 buttons - 0 problems

It cannot be more simple. Easy Slim remote replaces all necessary functions of audio and video remote controls. No more hugh and confusing remote controls.

This remote control learns all functions directly from the original remote control and thereby fits for all brands nonrestrictively.

Easy Slim remote aims to everyone, who is overstrained or unhappy with his overloaded original remote, because in many cases only the most important buttons like power, volume and channel are used. By abstaining from less often needed button, like menu, this remote is a perfect choice for elderly people, who might be readjusting menu settings with the extensive original remote control accidentally every now and then. This cannot happen when using Easy Slim remote.

But as well for everyone else, who is searching for a compact and clear remote control, Easy Slim is a good alternative. Not least because of the many different colors that are available.

- Summary of all features
- Compact and learnable universal remote control
- High diversity of colors: 7 different colors available
- 6 well-arranged buttons
- Avoids adjustments at menus or any other settings
- Very easy to program and handle
- Extra large buttons
- Compatible with all audio video brands
- Replaces any IR audio video remote control
- Reprogrammable as needed anytime
- No deletion of setting during change of batteries

## Step 1

Press POWER and CH UP buttons at the same time.

The LED will start flickering constantly. The learning system is on now.

## Step 2

Hold the sending end of the established remote aiming at the receiving end of Remote.

(distance 2-5cm)

### Step 3

Press the button of SeKi remote control (such as POWER button) until the LED remains on.

### Step 4

Hold down the button of the original remote control (such as POWER button).

When receiving the correct data, LED will be flickering 3 times slowly and then turn into flickering constantly.

At this time please stop holding the button.

### Step 5

To learn other buttons repeat steps 3 + 4 until the end of all learning.

### Step 6

When learning is completed, press POWER and CH UP button again to exit learning state.

The LED will extinguish.

